

2. Use your fingernail or a flathead screwdriver to pry open the magnetic contact's cover.
3. Mount the magnetic contact with a drill and two screws (included), then snap the cover back on.
4. Mount the transmitter bracket with a drill and two screws (included). Make sure that the arrow on the bracket is facing up.
5. If you're mounting your transmitter outdoors, push the silicone plugs into the push button's screw holes to waterproof the casing.
6. Slide the transmitter down onto the bracket.

SPECIFICATIONS

- Power source: CR2 battery
- Transmitter range: up to 1.6 km*
- Frequency: 433 MHz
- Dimensions: (W x H x D) 50 x 95 x 22mm

*Actual range will vary depending on local terrain and obstructions.

TECHNICAL SUPPORT:

If you encounter any difficulty in the operation of this product after reading the manual, please contact us. We will be happy to answer your questions and help you in any way we can.

WARRANTY:

Dakota Alert warrants this product to be free of defects in material and workmanship for a period of one year from the date of purchase. This warranty does not cover damage resulting from accident, abuse, act of God or improper operation. If this product does become defective, simply return it to Target Technology Ltd. Please include a note describing the troubles along with your name and return address as well as the original sales receipt. If the product is covered under warranty it will be repaired or replaced at no charge. If it is not covered by warranty, you will be notified of any charges before work is done.

Freephone New Zealand: 0508 242 333
 Phone (64) 6 751 2969
 Fax (64) 751 2717
 PO Box 730, New Plymouth 4342

NEW ZEALAND

Freephone Australia: 1300 588 195
 Fax (64) 751 2717

AUSTRALIA



Universal Transmitter

UT-4000-ANZ

USER GUIDE



This UT-4000 Dakota Alert Universal Transmitter sends a signal to your DCR-4000 receiver when its button is pressed or it detects a door/window opening. Connect multiple Dakota Alert transmitters to your receiver to create a complete security system.

NEW ZEALAND
www.bealert.co.nz

AUSTRALIA
www.bealert.com.au

CONTENTS

- Universal Transmitter
- Transmitter bracket
- Magnetic contact
- Silicone plugs (4)
- Screws (4)
- CR2 battery
- User Guide


SETTING UP YOUR UNIVERSAL TRANSMITTER

1. To install the battery, see “Installing the battery.”
2. To select a tune and connect your transmitter to your receiver, see “Connecting to your receiver.”
3. To mount your transmitter, see “Mounting your universal transmitter.”

INSTALLING THE BATTERY

1. Remove the four silicone plugs (if inserted) and screws on the back of the transmitter to take off the cover.
2. Insert the CR2 battery in the transmitter. Make sure that the + and – symbols on the battery match the symbols in the compartment.
3. Replace the cover and secure it with the screws.

Note: If you are mounting your transmitter outdoors, push the silicone plugs into the screw holes to waterproof the casing.

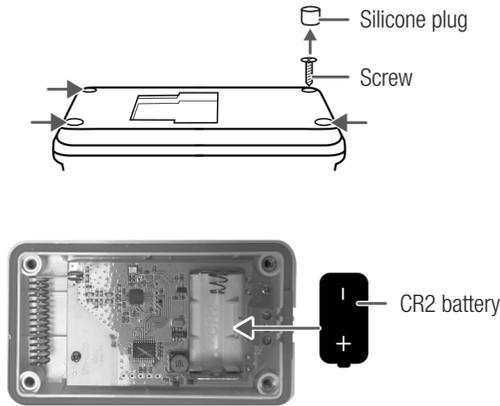

CONNECTING TO YOUR RECEIVER

Note: You can connect up to 16 transmitters to your receiver.

1. Place your receiver and transmitter near each other.

Note: Be careful not to activate your transmitter until you find the tune you want. Keep the magnetic contact away from the push button to avoid accidentally activating it.

2. Press and hold the **MODE** and **»»»** (volume) buttons on the receiver for three seconds. When all four lights flash, release the buttons.

| | | | | | |
|---|------------------|---|-----------------|----|----------------|
| 1 | Ding Dong (high) | 5 | Alarm/Siren | 9 | William Tell |
| 2 | Ding Dong (low) | 6 | Coo Coo Clock | 10 | Cannon in D |
| 3 | Westminster | 7 | Bird Chirping | 11 | Morning |
| 4 | Fur Elise | 8 | Twinkle Twinkle | 12 | Toreador March |

3. Press **»»»** (volume) repeatedly until you find the tune you want.
4. After you choose a tune, activate the transmitter (press its button or separate it from the magnetic door contact). The receiver beeps.


Note: If you accidentally activate the transmitter on a tune you don't want, press the volume button on the receiver to continue cycling through the tunes to select the tune you want, then reactivate the transmitter.

5. If you are coding more than one transmitter, repeat steps 3 and 4.
6. After your transmitter(s) are coded, press and hold the **MODE** button until the LEDs stop flashing.
7. To test the tune, activate the transmitter. You'll hear the selected tune through your receiver and the lights will flash.

CONNECTING AN EXTERIOR DETECTOR (OPTIONAL)

Your universal transmitter can be activated by any type of detector that provides a normally open (N/O) or normally closed (N/C) output. Both N/O and N/C contacts can be used simultaneously with the magnetic contact and push button.

1. Remove the four silicone plugs (if inserted) and screws on the back of the transmitter to take off the cover.
2. Insert wires through the silicone gaskets and into the terminals on the bottom of the transmitter:
 - For a normally closed connection, insert the wires into the N/C and common terminals.
 - For a normally open connection, insert the wires into the N/O and common terminals.

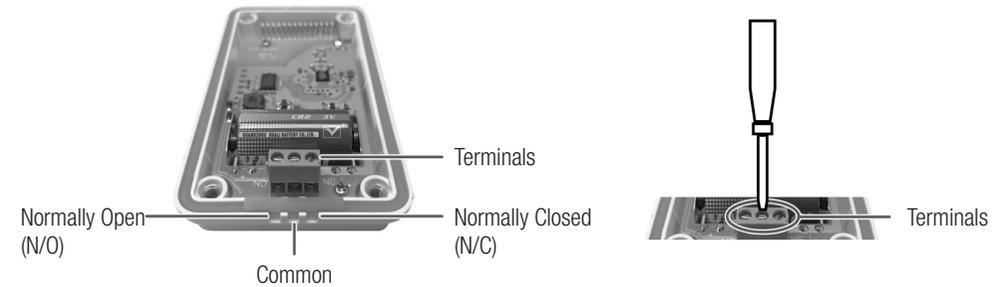

3. After inserting the wires, tighten the terminals with a small screwdriver.


Note: A 22 AWG solid wire can easily pierce the silicone gasket. If using a lighter gauge wire, you may need to pierce the gasket with a paper clip or small needle.

4. Replace the cover and secure it with the screws.

Note: If mounting your transmitter outdoors, push the silicone plugs into the screw holes to waterproof the casing.

MOUNTING YOUR UNIVERSAL TRANSMITTER

You can use the transmitter as a doorbell that activates when its button is pressed or as a warning that activates when the magnetic contact is separated from the push button.

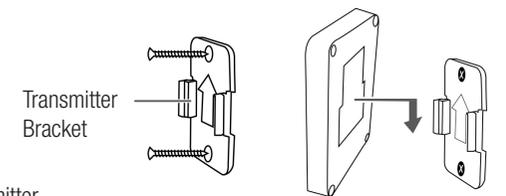

Doorbell

1. Use a drill and two screws (included) to mount the transmitter bracket. Make sure that the arrow on the bracket is facing up.
2. If you're mounting your transmitter outside, push the silicone plugs into the screw holes to waterproof the casing.
3. Slide the transmitter down onto the bracket.

Door/Window mounting

1. Choose mounting locations where the magnetic contact can be 10mm or less from the push button.

