



**TARGET**  
TECHNOLOGY




**INSTRUCTION MANUAL**

---

# **UNIVERSAL TRANSMITTER**

UT-4000-ANZ | UT-4K-PLUS-ANZ

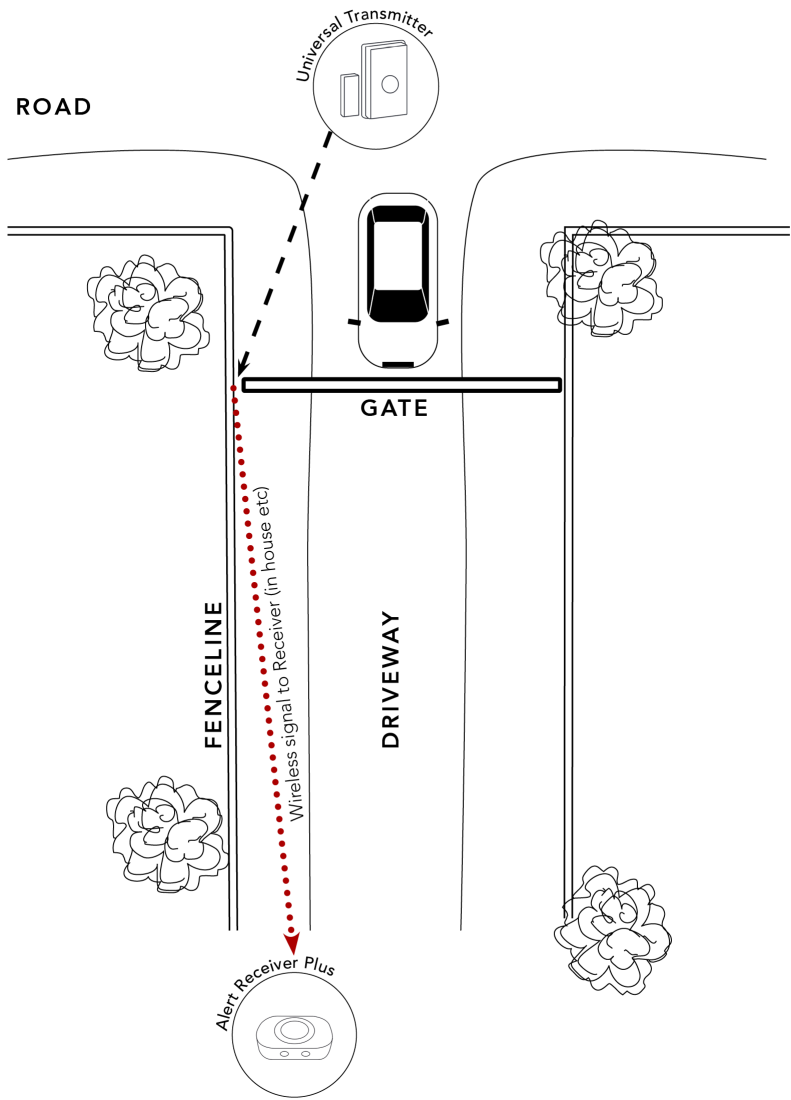

# SET UP.

# ABOUT.

## HOW IT WORKS

The Universal Transmitter is activated when the two contact points are separated or the doorbell button is pressed.

The Transmitter has two parts, which are set up side by side. When the two Transmitter parts are separated (or the button pressed) a signal is sent back to your Receiver, which plays a tone to alert you – so is usually set up in your house, shed, office etc.

The Universal Transmitter is commonly used to monitor gates, doors, windows or garden sheds being opened.

Alternatively, the Universal Transmitter can also be used like a doorbell, as the Transmitter also has a button which can be pushed which sends a signal back to the Receiver.

The kit has a range of 1.6 km between the Universal Transmitter and the Receiver.

## POWERING UP

- Connect your Receiver to the power, using the plug pack provided.
- Insert a CR2 battery into the back of the Universal Transmitter.
- If you are mounting your Transmitter outdoors, push the silicone plugs into the screw holes to waterproof the casing.

## SENSORS TO RECEIVER

**Be careful not to activate your Sensor until you have configured your Receiver and selected a tune.**

### **Configuring your Transmitter to your Receiver**

1. Place your Receiver and Universal Transmitter beside each other.
2. On the Receiver, press and hold the **MODE** button for 3 seconds until the lights on top flash.
3. There are 16 different tunes to select from. Press the **SOUND** button until you have found a tune you prefer.
4. Once you have found your preferred tune, activate the Transmitter by pressing the button on the Transmitter. A small beep will sound on the Receiver to confirm the configuration.
5. Once configured, press and hold the **MODE** button on the Receiver until the lights stop flashing.
6. To test the Kit, activate the Transmitter by pushing the button again or by separating the two pieces, which should sound on your Receiver.

## INSTALLING TRANSMITTERS

You can use the Transmitter as a doorbell that activates when the button is pressed or to notify you when the magnetic contact is separated.

### Installing as a Doorbell

1. Use a drill and two screws (included) to mount the Transmitter bracket. Make sure that the arrow on the bracket is facing up.
2. If you're mounting your Transmitter outside, push the silicone plugs into the screw holes to waterproof the casing.
3. Slide the Transmitter down onto the bracket.

### Door / Window Mounting

1. Choose mounting locations where the magnetic contact can be 10 mm or less from the push button.
2. Use your fingernail or a flathead screwdriver to pry open the magnetic contact's cover.
3. Mount the magnetic contact with a drill and two screws (included), then snap the cover back on.
4. Mount the Transmitter bracket with a drill and two screws (included). Make sure that the arrow on the bracket is facing up.
5. If you're mounting your Transmitter outdoors, push the silicone plugs into the push button's screw holes to waterproof the casing.
6. Slide the Transmitter down onto the bracket.

## DISCONNECTING SENSORS

### Removing Sensor Connections

- You can reset your Receiver to remove all the Sensors that are connected to it.
- Press and hold the **Mode** button until the lights flash.
- Press and hold the **Mode** and **Sound** buttons together for five seconds. The lights will flash quickly then turn off. The Receiver has now disconnected all Sensors configured to it.
- To reconfigure Sensors, see page 4.

## CONNECTING ACCESSORIES

If you have purchased the Alert Receiver Plus you are able to connect additional accessories such as Sirens or Lights to your kit. Instructions on how to connect these accessories are available on our website.

## HAVING TROUBLE?

If you're having trouble with the installation of your kit, or have questions on how best to configure your kit, check out the Frequently Asked Questions on our website.


[www.bealert.co.nz/FAQ](http://www.bealert.co.nz/FAQ)

## ACCESSORIES

Our products are designed with flexibility and our systems can all be customised for your situation.

### Sensors


A variety of Sensors can be connected to your set up, and each Sensor differentiated with a different alert sound.

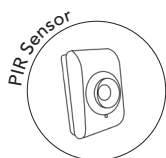


Detects heat motion in front of the Sensor.



Detects motion that passes between Beam Sensors.

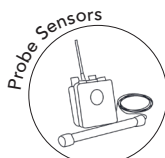

Detects metallic motion that passes near Sensor.

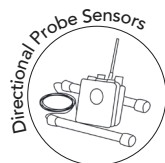


Detects direction of metallic motion that passes near Sensor.

### Receivers


You can have multiple Receivers connected to your Sensors so that you can be alerted at different points on your property or around your home.



Alerts when Sensor activated and sends signal to additional accessories.

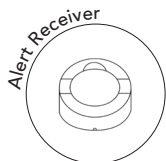

Alerts when Sensor activated.

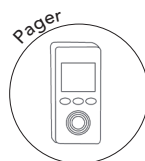

Wireless Receiver that alerts when Sensor activated.

### Additional Alerts / Volume

You can configure additional accessories for extra volume or alert points, such as outdoor lights, sirens or bells that can be connected to the Alert Receiver Plus.



# TARGET

TECHNOLOGY

## **NEW ZEALAND**

[www.bealert.co.nz](http://www.bealert.co.nz) | 0508 242 333

## **AUSTRALIA**

[www.bealert.com.au](http://www.bealert.com.au) | 1300 588 195

[info@bealert.co.nz](mailto:info@bealert.co.nz)